

John Lewis

Spring return roller blind

Fitting & operating instructions

Thank you for purchasing this product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product. It is recommended that this blind should only be installed by persons competent in DIY.

Carefully unwrap the blind from its wrapping. Then check the brackets as these could be a different style for each end. The brackets are universal and can be fixed in a top faced or side fixed position.

Fitting the brackets

Measure the fabric width of the roller blind and place your bracket 35mm (1.375") wider than this measurement with two screws in each bracket, making sure the brackets are correct for that side of the blind and are level.

Fitting the blind

For a standard blind the spring end is situated on the left side with the spring locking pin facing towards you. The fabric comes down from the back of the blind. (Fig. 1).

A reverse roll blind is the opposite to the above with the spring locking pin facing away from you. The fabric hangs from the front of the blind. (Fig. 2).

With the blind rolled in the uppermost position, push fit the blind into the idle end bracket, (opposite the spring end). Then with the locating lug in the lowest position, place the blind into the spring end of the bracket. (Fig. 3).

Only when the blind is secure in both brackets, release the locking pin from the front of the spring (do not pull all the way out). (Fig. 3).

Your blind has been pre-tensioned for you and is now ready to operate.

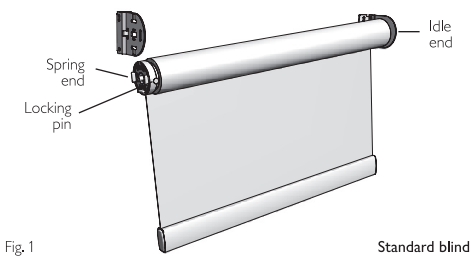


Fig. 1

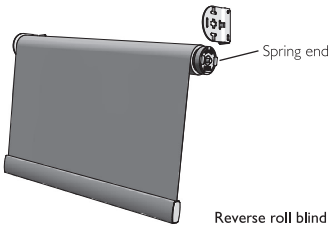


Fig. 2

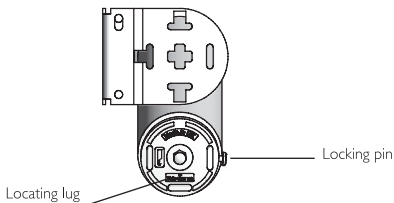


Fig. 3

Lost tension on the spring

If you have lost all tension on your blind,

1. Extend the blind to the lowest position.
2. Ensure the locking pin is **IN**. (Fig. 4).
3. With the idle end of the roller in the bracket release the spring end and roll up your blind by hand.
4. After rolling, secure the spring end of your blind back into the bracket.
5. When the blind is fully secure in both brackets, gently release the locking pin (Fig. 5. Release the pin) (Do not pull pin all the way out).

Remember to release the locking pin before operation.

6. Check the tension of your blind by pulling it down gently (Fig. 6. Pull down).
7. If not enough tension, fully extend the blind again. Push the locking pin back into the spring. You may have to keep your thumb on the pin and turn the spring slightly, until you feel the pin click into place. (Repeat steps 3-6 if required).

You may need to repeat the above steps 2-3 times in order to reach the required tension.

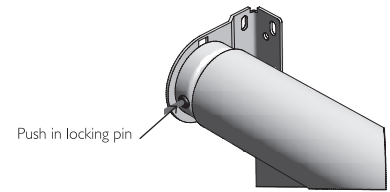


Fig. 4

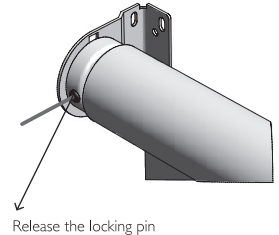


Fig. 5

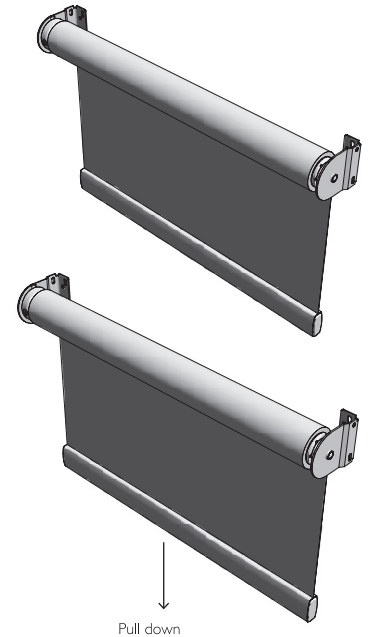


Fig. 6

WARNING!


Please read all safety warnings and installation information fully before installation. Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

For further information go to: www.makeitsafe.org.uk

The head rail shall not be installed less than 1.5m from the floor.

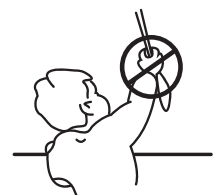

**make it
safe**

John Lewis Partnership
171 Victoria Street
London SW1E 5NN
johnlewis.com

Batch code:

Retain these instructions for future reference.